
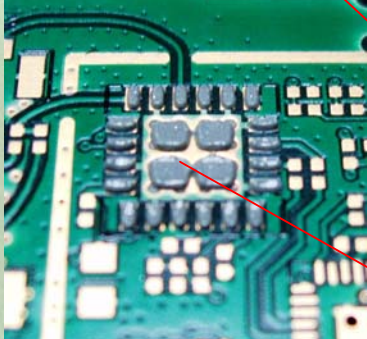


Cutout for ease in load & unload PCB

Precision XY adjustments for accurate alignment

Laser cut stencil

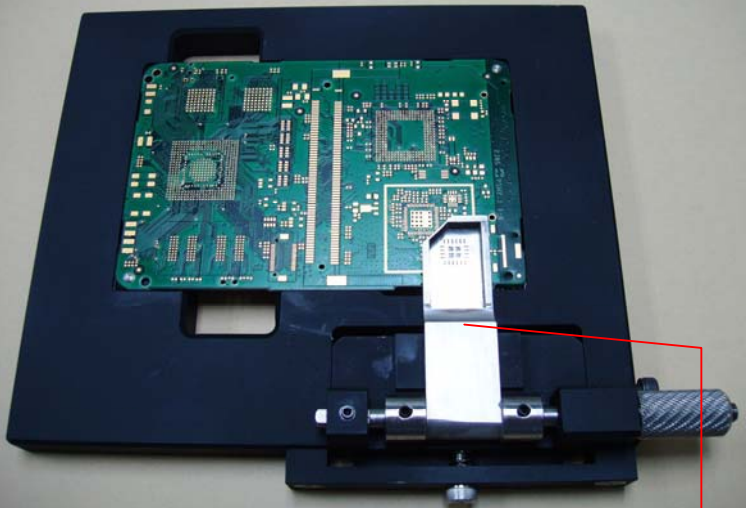

Locators pins x 3 for accurate location of every PCB

Magnet to hold stencil down flat & firmly on PCB for manual print with mini metal squeegee

Samples of solderpaste pints on PCB & plastic



AVI Precision Engineering Pte Ltd, 1 Kallang Sector #04-03, Singapore 349276
T: +65 67483866, F: +65 67484810, avipre@avipre.com.sg, www.avipre.com
Skype: avipre, wongronnie